32.8

IMPORTANT NOTE

Before drilling mounting holes, please ensure that the position of the lock when mounted will allow clearance for the cam to function. LOCKEY

INSTALLATION INSTRUCTIONS

EC950 Horizon

Flush Mounted Electronic Combination Locks

ease check that template correct size before use – copies can be distorted

LockeyUSA 4245 S. Lincoln Rd. Mt. Pleasant, MI 48858 T: 888.395.0163 E: info@lockeyusa.com W: www.lockeyusa.com



10211011 - 0104220

www.lockeyusa.com

INSTALLATION INSTRUCTIONS EC950 – Horizon Flush Mounting

Mounting Instructions

The Digital Combination Lock can be mounted on cupboards, cabinets and lockers etc. as an original or as a direct replacement for existing cam locks.

Special Notes

Before installing the Horizon, load the battery and familiarize yourself with the operation and programming.

Unless manufactured to special order, the lock is supplied in the "PRIVATE" operating mode with a four-digit code.

In this mode, the user must enter a four-digit User Code to open it. The unit will re-lock itself once open. The lock can be opened at any time using the Master Code.

Unless manufactured to special order.

The default Master Code is 11 33 55 77

The default User Code is 22 44.

These codes are common to all standard locks and it is very important that you set your own personal Master and User Codes.

Your lock is not secure until you have changed the default Master Code and User Code.

Keep a safe record of your master code as it is not possible to make any programming changes without it.

Please see programming guide to set your own codes.

Installation Guide

ENSURE BATTERY IS INSTALLED BEFORE MOUNTING THE HORIZON

Flush Mounting (See diagrams)

Step 1 Place template on door and mark the cut-out shape. (See installation template for details)

Step 2 Cut the hole in the door panel.

Step 3 Fit the Digital Combination Lock to the door.

Step 4 Position the clamp box over the rear of the lock. The clamp box is available in three different sizes and should be selected according to the door panel thickness to ensure that the shortest possible box is used and that the lock is not loose in the door panel.

Step 5 Fit and tighten the mounting nut and mounting screw. The length of the fixing screw should be selected according to the door panel thickness to give a nominal insertion depth of 8mm into the lock.

Step 6 Select the cam which suits your door and frame and attach it to the square shaft at the end of the spindle using the M4 patch screw and flat washer provided.

Step 7 Check the operation of the lock using the factory preset User Code 22 44.

Step 8 If the lock is functioning correctly: CHANGE THE DEFAULT
MASTER CODE 11 33 55 77 and DEFAULT USER CODE 22 44 and

program the lock using the programming and operating instructions enclosed.

Inserting Battery

Step 1 Remove all packaging.

Step 2 Insert battery CR123. As shown.

Step 3 Secure battery with battery cover.

Step 4 M4 screw



