



# OPERATING AND PROGRAMMING INSTRUCTIONS for EC-783 & EC-785 RFID Lock

FUNCTION	MODE		KEY SEQUENCE	NOTES
	PUBLIC	PRIVATE		
MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)				
			STEP 1      STEP 2      STEP 3	
ADD MASTER CARD	✓	✓	[logo] [logo] [Old Master CARD] [press logo until] ★★☆☆☆	[Old Master CARD] [New Master CARD] (hold new card for 5 seconds)
DELETE SINGLE MASTER CARD (with card)			[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Scan Master card to delete] [Master CARD]
DELETE SINGLE MASTER CARD (without card)			[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[press logo until master light config is shown] [Master CARD]
ADD USER CARD		✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] [New USER CARD]
DELETE ALL USER CARDS		✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] [press logo until] ★☆☆☆☆ [Master CARD]
DELETE USER CARD	✓		[Master CARD]	OPENS LOCK AND DELETES USER CODE
DELETE SINGLE USER CARD(with card)		✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] [Scan USER card]
DELETE SINGLE USER CARD (without card)		✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD][press logo until user light config is shown][Master CARD]
OPEN LOCK	✓	✓	[Master CARD]	[logo] DELETES USER CARD IN PUBLIC MODE
CLOSE LOCK		AUTO		[logo] RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET PUBLIC MODE		✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD]
SET PRIVATE MODE	✓		[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD]
SET AUDIO ON	✓	✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] Turns AUDIO ON
SET AUDIO OFF	✓	✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] Turns Audio OFF
ECO MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD] Default mode
SLOW SCAN MODE SET	✓	✓	[logo][logo] [Master CARD] [press logo until] ★☆☆☆☆	[Master CARD]

### USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOW BELOW (EG. STEP1STEP2STEP3)

OPEN LOCK	✓	✓	Scan USER card (Eco Mode requires logo button press before scan)	
CLOSE LOCK	✓		Scan USER card (Eco Mode requires logo button press before scan)	
CLOSE LOCK		AUTO		RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS

### FUNCTIONS AVAILABLE TO ALL CODES

BATTERY CHECK	✓	✓	[logo] [logo] [logo]	REPLACE BATTERIES IF RED LIGHT SHOWS
---------------	---	---	----------------------	--------------------------------------

NOTES
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.

MODE DEFINITION	MODE
ECO	BUTTON PRESS FIRST
SCAN	

BATTERY CONDITION INDICATOR
FOUR GREEN LIGHTS - EXCELLENT
THREE GREEN LIGHTS - VERY GOOD
TWO GREEN LIGHTS - GOOD
ONE GREEN LIGHT - LOW
RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE
FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE

ENSURE THAT YOU KEEP A SAFE RECORD OF YOUR USER CARDS.  
ENSURE YOU KEEP THE MASTER CARD SAFE WITHOUT IT YOU CAN'T CHANGE ADD OR DELETE USERS

