



USER INSTRUCTIONS

GE370 Gemini Digital

For full installation, operating
and programming instructions
please visit www.lockeyusa.com

LockeyUSA
4245 S. Lincoln Rd.
Mt. Pleasant, MI 48858
T: 888.395.0163
E: info@lockeyusa.com
W: www.lockeyusa.com

Public Mode

Turn Handle to Locked Position

Lock

ENTER USER CODE
(4 DIGITS)



CONFIRM CODE
(4 DIGITS)



TRY TURNING
HANDLE
ENSURE LOCKED

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN

Private Mode

Unlock

USER OR
MASTER CODE



TURN HANDLE
TO OPEN



LOCK
Automatic after 4
seconds

Change User
Code

#



OLD USER CODE



02



NEW USER CODE





NEW USER CODE



Emergency Key Override

INSERT MASTER KEY OVERRIDE & TURN 90°
EITHER CLOCKWISE OR ANTI-CLOCKWISE

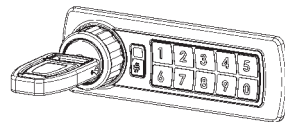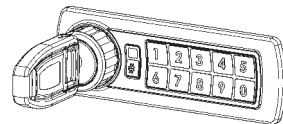

TURN KEY BACK 90° TO ORIGINAL
POSITION & REMOVE FROM LOCK

Error



Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.