

Lockey® Key Safe Box  
Instructions

It is recommended to change the code periodically, and to install the key safe in a concealed, discreet position either internally or externally.


All Lockey® safes are supplied with the same factory code; it is **1982B**,  
***THEREFORE, PLEASE SET A NEW CODE BEFORE USING.***

Changing the combination:

1. To open, press 1982B and turn knob to the right and lift out key safe front.
2. Press in B button and turn knob to left
3. Undo the 2 red screws and lift off the plate carefully.


Supplied with the key safe are:

1. 4 – fixing screws
2. 4 – raw plugs
3. 1 – tweezer
4. 1 – blue non code tumblers
5. 2 – red code tumblers

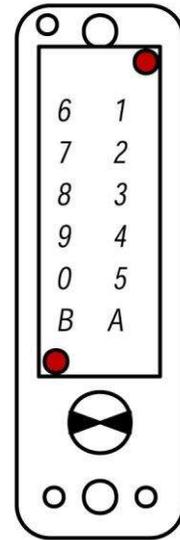

Determine your new code ***WHICH MUST ALWAYS END IN “B”.***  
***NEVER REMOVE THE “B” TUMBLER.***

- Your code can consist of anywhere from 3 to 6 digits (ie. 690AB or 1580AB) (although your group code is non-sequential, there are over 4,000 code possibilities)
- The code is determined by the number of red tumblers used. (The blue tumblers are the non-combination)
- To increase your code, add more red tumblers, to decrease, add more blue
- Turn the knob to the left to allow the tumblers to slide in and out easily
- Using the tweezers provided, move the tumblers to your own code (the tumblers are shaped to fit into the slots)
- All the tumblers in row 6 to B must be placed in as per the diagram, all the tumblers in row 1 to A must be placed in as per the diagram
- The colored tip must be facing upward

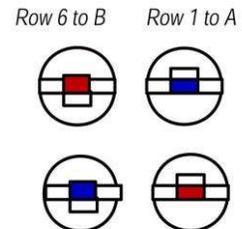

Do not force the tumblers in, simply turn the front knob and they will drop in.

- Replace the plate securing with the red screws.
- Test your new code before locking up your Key Safe
- Lock your Key Safe by sliding into the box, pressing the B button and turning the knob to the left.

